


Halsey Science Center 106

The touch panel display is located on the lab table not teaching station.

If black/blank touch any part of the screen to wake it

Select **Begin** to start session

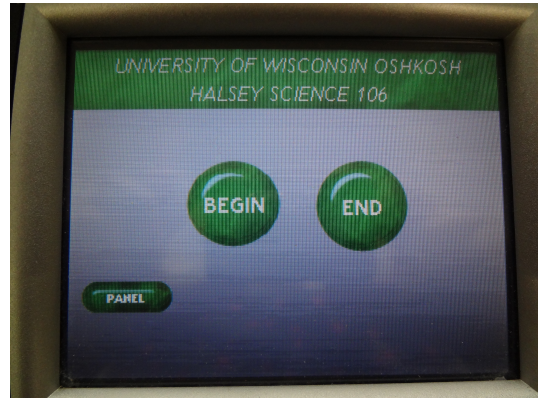

Please note: the touch panel display in this room is mobile. If it is removed from the charging dock during class time, please return it to the charging dock at the end of the session.



Press **Left** or **Right** to begin

Left and right references are when facing the class not facing the chalk boards

Select **On** under power to turn on the projector

Repeat to power other projector by going selecting **VP's** across the top of the touch panel

The Device Selection screen is native to the projector; if in the Left menu, the selected device will only appear on the left display





Lighting

Select **Lights** on the Device Selection Screen or available on Left or Right screen

Present - only chalkboard lights are on
 Video - back three rows of lights dimmed
 CB On/CB Off - toggle chalkboard lights on and off

Computer Projection

Turn on computer if not already on
 Select **Computer** on Sources screen
 Volume control can be manipulated through the computer as well as on the touch panel display

Laptop Projection

If using laptop, remember to bring any additional adaptors necessary for connecting the laptop to the projector

Connect laptop using VGA connection in teaching station
If unsure how to extend or duplicate the display from the laptop to the projector consult the laptop's users' manual or the UW Oshkosh Knowledge Base.

Select **Laptop** at the Sources screen to display connected laptop

DVD/VCR Projection

Select **DVD/VCR** at Device Selection screen

Press **DVD** or **VCR** on next screen to specify media type on device

If necessary, press the open/close button to eject the disc tray, place media, and then close tray with the same button

Utilize touch panel display to play, fast forward, or rewind media





Blu-Ray Projection

Select **BluRay** at Device Selection screen

Press the open/close button to eject the disc tray, place media, and then close tray with the same button

Utilize touch panel display to play, fast forward, or rewind media

Document Camera Projection

Select **Doc Cam** at Device Selection screen

Power switch on document camera must be switched on. All other controls are on the physical document camera.

Microphone Options

A hand-held microphone as well as a lapel microphone is available for use; each device must be powered on separately from classroom equipment


The microphone volume is controlled from the Device Selection screen in all menus except DVD/VCR

Ending the Session

Press **Home** in any menu and **End** on the Begin/End screen to end session
Touch panel will prompt for verification.
Click **Yes**.

Remember to restart the classroom computer

Take all personal items especially flash drives, multimedia, or any adaptors

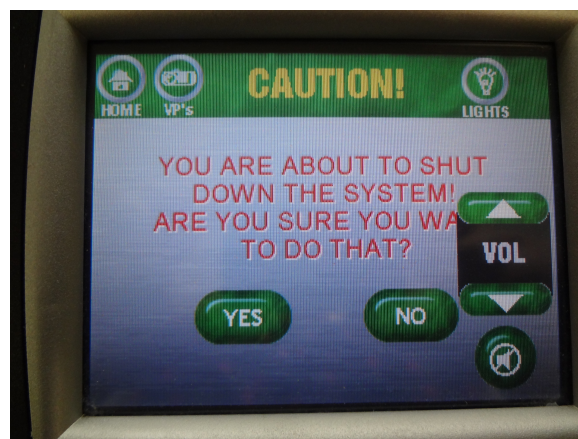

To report problems with classroom technology or request training contact the **Information Technology Help Desk** via email: helpdesk@uwosh.edu or phone: 920-424-3020.